

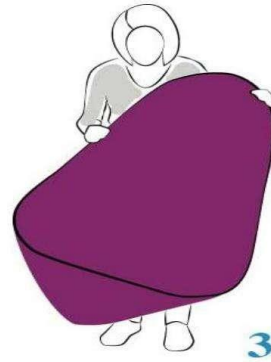


Quick-Setup Tent Instruction Manual

OPEN

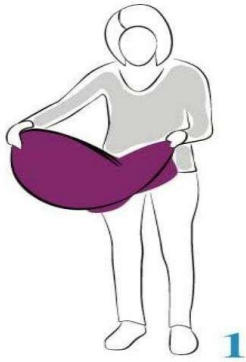



CLOSE

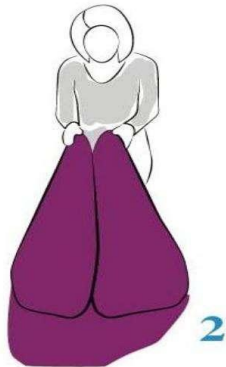


Warning
Do not close to fire or heat source.

Montaje Rápido de Tienda de Campaña

ABIERTO

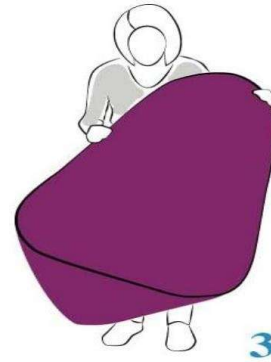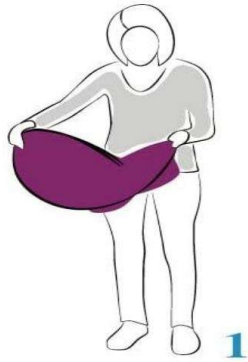



CERCA

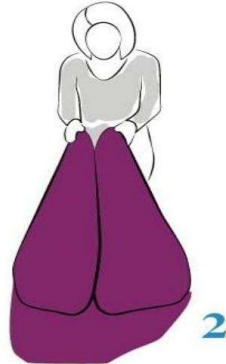


Advertencia
No acercar al fuego o fuente de calor.

Schnellaufbau-Zelt Bedienungsanleitung

OFFEN

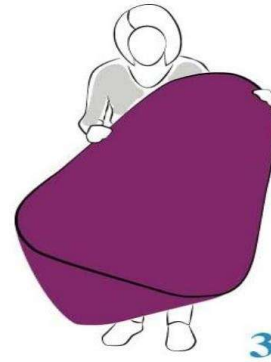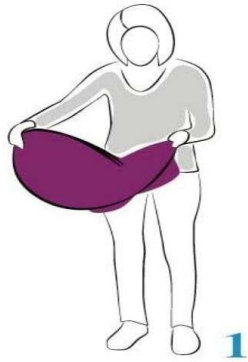

SCHLIESSEN


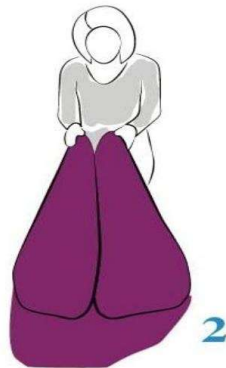


Warnung



Nicht in der Nähe von Feuer oder Wärmequellen aufstellen.

Manuel d'instructions de la tente

OUVRIR

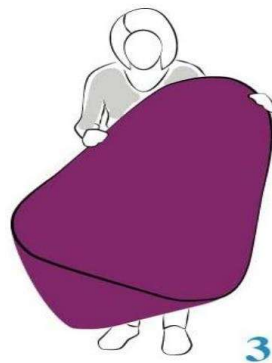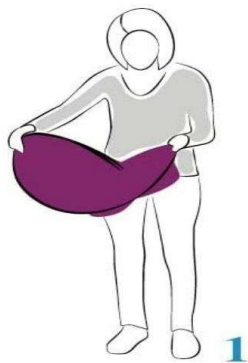

FERMER

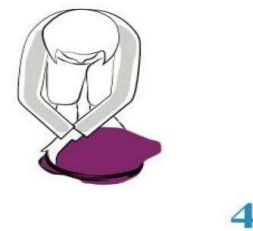
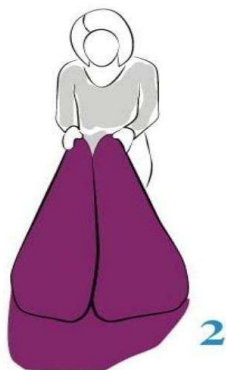


Avertissement


Ne pas approcher du feu ou d'une source de chaleur.

テント取扱説明書

開ける

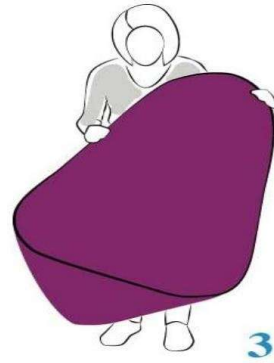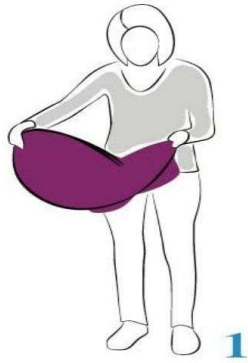



近い

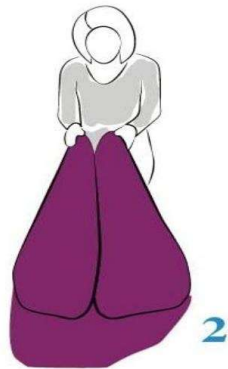



警告
火気や熱源に近づけないでください。

Manuale di istruzioni della tenda

APRIRE

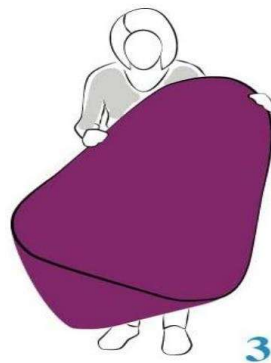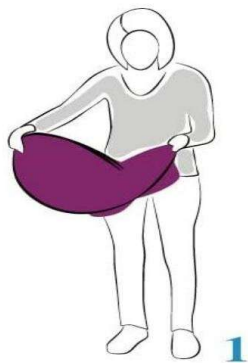

VICINO

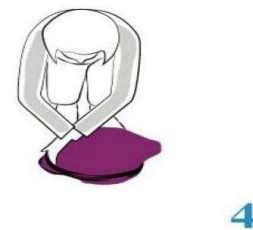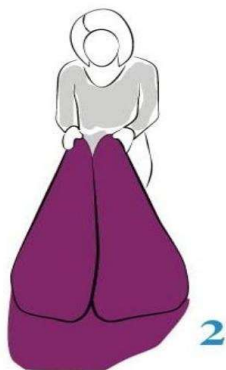

Avvertimento
Non avvicinarsi al fuoco o a fonti di calore.