


Electric Warming Tray

Operation Instruction


Please read the manual carefully before use for standardized operation and use.

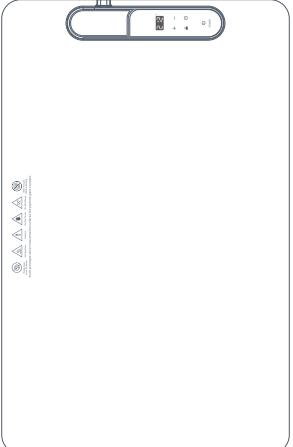

Product Summary

- 1: Product introduction and operation instructions
- 2: Product function
- 3: Storage steps
- 4: Cleaning and maintenance
- 5: Safety tips
- 6: Insulation methods and safety tips
- 7: Service guide

1: Product introduction and operation

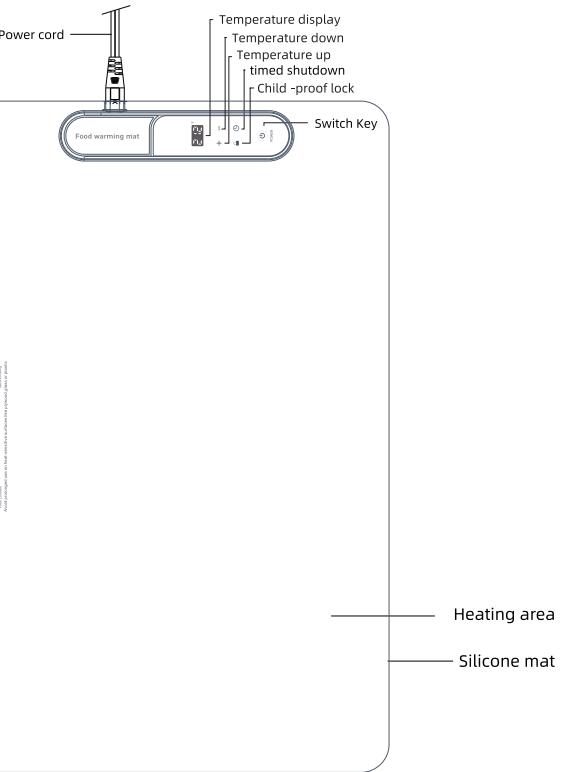

2: Product function


I. Product use



II. Use scenarios



3: Storage steps

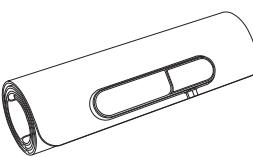

Step 1: Roll up



Step 2: Put the product and power cord in a dust bag

4: Cleaning and maintenance

I. Maintenance

Keep the body dry. Please cut off the power when it is not in use to extend its service life.



II. Cleaning Instructions and Precautions

 
1. Confirm that the power cord plug has been pulled out from the socket, and then clean and maintain the product after it has cooled down.



2. Wipe the surface with a soft damp cloth if there is a small amount of dust on the surface, and store it after the surface is dry.



3. Wipe with a soft damp cloth dipped in a small amount of toothpaste or mild detergent if there is oil on the surface, until no residue is left. Note: Do not wipe with bleach or corrosive liquids.




4. Do not rinse directly with water or immerse it in water for cleaning.



5: Safety tips

- In order to ensure safe use and avoid injury to you or others as well as property damage, please abide by the following safety precautions.
- Failure to comply with the safety warnings and improper use may lead to accidents.
- This product does not take into account the situations where unattended children, disabled people use the device, nor the situations where children play with the machine. These situations may lead to accidents.

[Warning] Key safety precautions

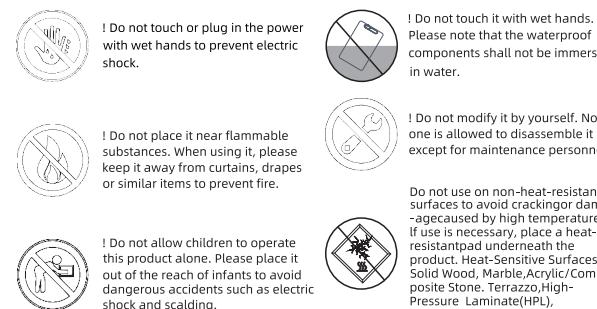

[Warning] Key safety precautions

- ! During the working process of the product and for a period of time after the pan body is removed, the surface temperature of the insulation area is relatively high. Please Do not touch, in case of high temperature burns.
- ! Do not place the product directly on a metal countertop for use. To avoid danger caused by the product heating the metal countertop.
- ! Do not rinse the product with water. Prevent water and foreign objects from entering the body to keep the body clean.
- ! During the product working process, it is forbidden to place irrelevant articles such as paper, aluminum foil paper and cloth on the panel.
- ! Note that the surface of products with high temperature scales will become hot during use.
- ! Do not heat sealed containers or sealed foods (e.g. cans, pressure cookers, etc.) directly on top of the product. Avoid Heat expansion accident.
- ! Please use a power socket ≥10A separately. After use, unplug the power cord plug from the socket.

6: Insulation methods and safety tips

Use tableware correctly



① Please use a flat dish. Heat preservation will work better.



② The bottom of the dish is recessed more than 5mm, and the heating and insulation effect is not ideal.

[Warning] Key safety precautions

- ! When the product is in normal use or idle, please ensure that it is more than 1.5 meters away from water sources or fire sources.
- ! If the power cord is damaged, it must be replaced with a special cord or a special component purchased from its manufacturer or repair department.

[Note] Matters that may cause minor injuries or property damage

- ! Please do not subject the panel to heavy pressure and sharp scratches.
- ! The product cannot be operated with an external timer or independent remote control system.
- ! Avoid wiping with thinner, toluene, acidic detergent, kerosene, alcohol or chemical reagents to prevent discoloration.
- ! Before doing external cleaning work, you must first turn off the power source and unplug the power plug. After the panel cools down, do not clean it directly with water.
- ! If there are cracks on the surface of the panel, turn off the product to avoid possible electric shock.
- ! Metallic objects such as knives, forks, spoons and covers should not be placed on the surface of the panel as they may heat up.
- ! Do not cover the panel and do not touch the panel for warmth.
- ! The oil stains on the surface of this product must be removed cleanly to avoid discoloration and damage.

7: Service guide

Anomaly resolution

Abnormal condition	Possible cause	Solutions
The indicator light is off.	Product power plug loose	Check whether the power plug and socket contact is good
	Circuit board fault	Unplug the power supply and reconnect the power supply. If it is still abnormal, please send it to the maintenance point for maintenance.
No heating under normal operating conditions	circuit fault	Please send it to the maintenance point for repair.
	Heating element fault	
Button failure	Dirty control panel	Clean and use
	Circuit board fault	Unplug the power supply and re-connect the power supply. If it is still abnormal, please send it to maintenance for inspection.
All lights flashing, no heating	Temperature sensor short circuit	Unplug the power supply and re-connect the power supply. If it is still abnormal, please send it to maintenance for inspection.

When you think the product has a fault, please check the above situation before sending it to the repair site for repair. If the problem cannot be solved, you can contact after-sales service for repair.

Parameters

Product Name	Electric Warming Tray	
Power Supply	AC 120V ~ 60Hz	
Model	WARMING-SMX06	WARMING-SMX08
Rated Power	300W	450W
Weight	1.5Kg/3.31 lb	2.1Kg/4.63 lb
Size	60*38cm/23.62*14.96in	80*38cm/31.5*14.96in



Applicable Models:
WARMING-SMX06
WARMING-SMX08