


PORTABLE SMART PROJECTOR

USER MANUAL

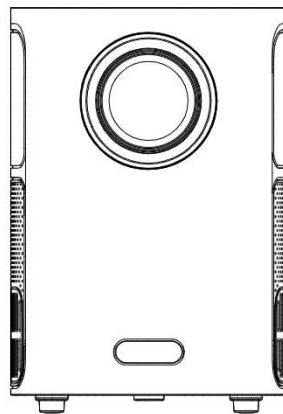

Model: Q1 PRO

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. this device may not cause harmful interference.
2. this device must accept any interference received, including interference that may cause undesired operation.



RoHS FC CE  

MADE IN CHINA

Android version


CONTENTS

PRECAUTIONS.....	1
PACKING LIST.....	2
FUNCTION OVERVIEW.....	3
QUICK START.....	4
INPUT SOURCE.....	5
NETWORK CONNECTIONS.....	6
PROJECTOR CONNECTION	9
PROJECTION DISTANCE & SIZE	9
NOTICE.....	10
TROUBLESHOOTING GUIDE	11

PRECAUTIONS

1. Please read this manual carefully before using the projector;
2. In order to ensure the stability of the power supply of this projector, please use a power supply line that meets the national power consumption standard and a power socket with protective measures such as grounding;
3. Please use the power type indicated on the projector and the power line included for power supply;
4. Do not disassemble or modify the projector by yourself, or the Company will not offer free warranty service;
5. Do not look directly into the projector lens while it is working, or it will burn your eyes ;
6. Do not place the projector on objects such as cloth or blankets that may cause the vents to be blocked;
7. The product is not waterproof and should avoid being watered or splashed, and objects filled with liquid shall not be placed near the product such as vases or cups;
8. To prevent electric shock, please protect the projector from rain or dampness;
9. Please turn off the power supply and disconnect the power line from the plug if the projector is not used for a long time;
10. Please use the original foam and other vibration-proof materials when transporting the product;
11. If the product is damaged, do not attempt to repair it yourself. Please contact the dealer.

PACKING LIST

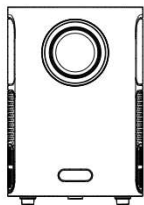


1 Projector



2 Remote




3 User Manual



4 Power Cable




5 AV Cable





6 HDMI Cable

FUNCTION OVERVIEW

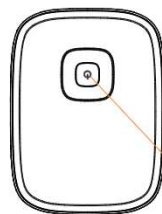


Power button

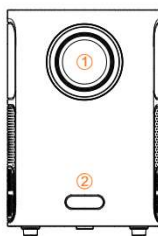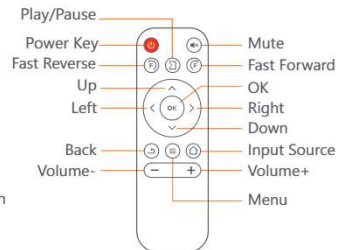

1 CAMERA LENS


2 IR WINDOW

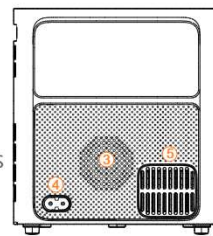

3 SPEAKER


4 POWER INPUT

5 AIR VENT

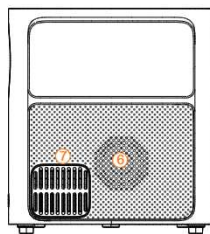

6 SPEAKER

7 AIR VENT

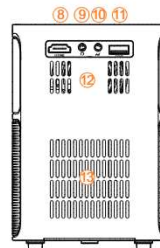

8 HDMI

9 AUDIO OUT


10 AV IN

11 USB

12 IR WINDOW

13 AIR INLET

QUICK START

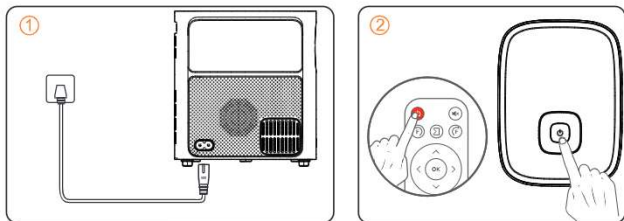



① Plug the power cord into an outlet.

② Press the power button to turn on the projector.

③ select and conduct the program.


④ Adjust the focus for a clear image performance.

⑤ Press the power button twice to turn off the projector.

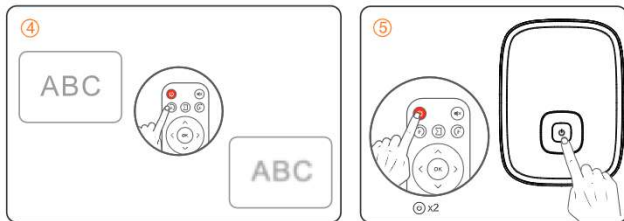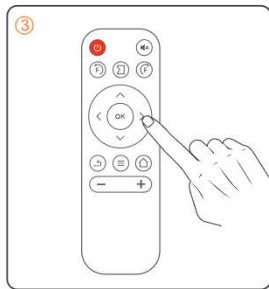


INPUT SOURCE


A Multimedia Connection

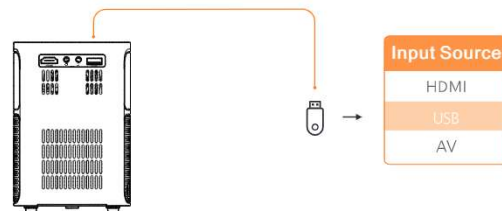

B HDMI Connection

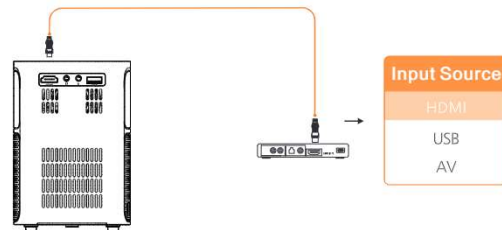

C AV Connection

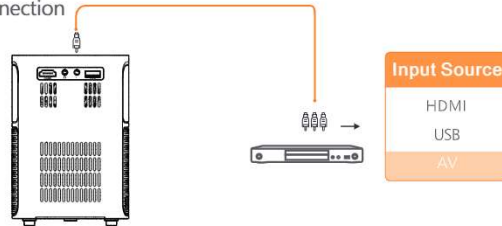

Network Connections

1 Wi-Fi Connecting

Set up--Click wifi--Selection network--Enter the code--Done



2 Map projection

SETTING--map projection--Front-Desktop




3 Mouse Function


In case some apps cannot be controlled by locking icons, you may press the menu key 3 times continuously, then you can have a mouse pointer on the screen to control those apps. on the contrary, you can press the menu key 3 times continuously to get back to normal control mode.




PROJECTOR CONNECTION

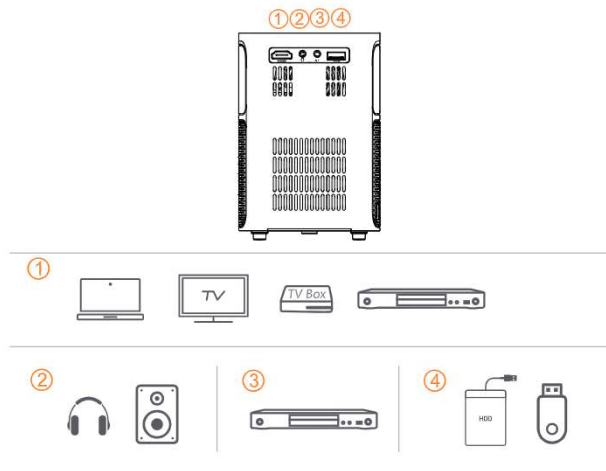

PROJECTION DISTANCE&SIZE

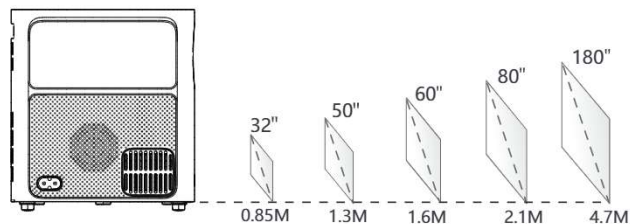

NOTICE

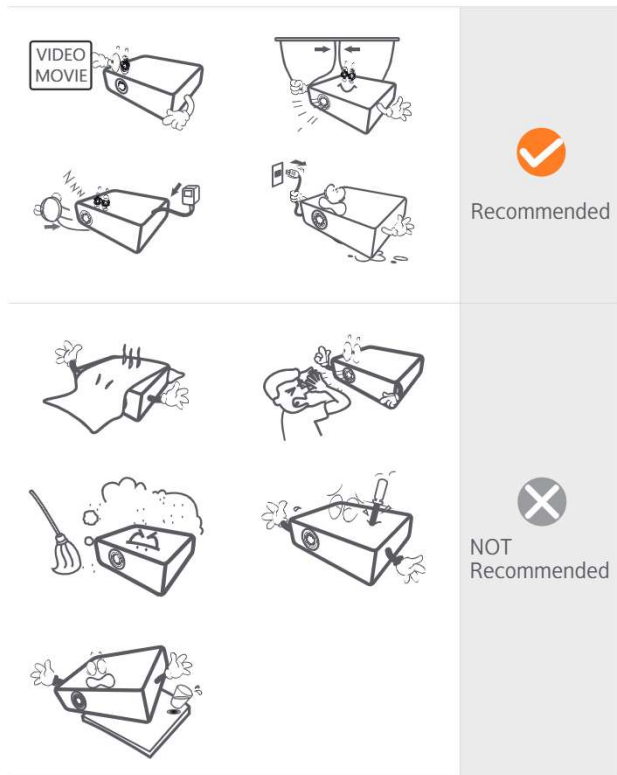

TROUBLESHOOTING GUIDE

1. Blurry Image

*Adjust focus ring/keystone.

*Projector and screen/wall must be in effective distance.

2. Remote Unresponsive

*Make sure remote points at IR receiver directly.

*Do not cover IR receiver.

*Check the battery.

3. Upside Down Images

Enter "Menu" on projector or remote to flip the projection image.

4. Factory Reset

*Go to **Menu > OPTION > Restore Factory Default** to restore the projector to default settings.


INHALT

VORSICHTSMASSNAHMEN.....	13
PACKLISTE.....	14
FUNKTIONS BERSICHT.....	15
SCHNELLSTART.....	16
EINGABEQUELLE.....	17
NETZWERKVERBINDUNGEN.....	18
PROJEKTORANSCHLUSS.....	21
BEACHTEN.....	22
ANLEITUNG ZUR FEHLERBEHEBUNG.....	23

VORSICHTSMASSNAHMEN

1. Bitte lesen Sie dieses Handbuch sorgfältig durch, bevor Sie den Projektor verwenden ;
2. Um die Stabilität der Stromversorgung dieses Projektors zu gewährleisten, verwenden Sie bitte eine Stromversorgungsleitung, die den nationalen Stromverbrauchsstandards entspricht, und eine Steckdose mit Schutzmaßnahmen wie Erdung;
3. Bitte verwenden Sie zur Stromversorgung den auf dem Projektor angegebenen Stromtyp und das mitgelieferte Stromkabel;
4. Zerlegen oder modifizieren Sie den Projektor nicht selbst, da das Unternehmen sonst keinen kostenlosen Garantieservice anbietet;
5. Schauen Sie während des Betriebs nicht direkt in die Projektorlinse, da Sie sich sonst die Augen verbrennen;
6. Stellen Sie den Projektor nicht auf Gegenstände wie Tücher oder Decken, da diese die Lüftungsschlitze verstopfen könnten;
7. Das Produkt ist nicht wasserdicht und sollte weder Wasser noch Spritzern ausgesetzt werden. Mit Flüssigkeit gefüllte Gegenstände wie Vasen oder Tassen dürfen nicht in der Nähe des Produkts platziert werden;
8. Um einen Stromschlag zu vermeiden, schützen Sie den Projektor bitte vor Regen oder Feuchtigkeit.
9. Bitte schalten Sie die Stromversorgung aus und trennen Sie das Stromkabel vom Stecker, wenn der Projektor längere Zeit nicht verwendet wird;
10. Bitte verwenden Sie beim Transport des Produkts den Originalschaumstoff und andere vibrationsfeste Materialien;
11. Versuchen Sie nicht, das Produkt selbst zu reparieren, wenn es beschädigt ist. Bitte wenden Sie sich an den Händler.

PACKLISTE

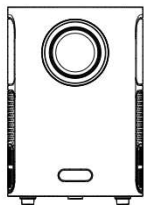


1 Beamer



2 Fernbedienung




3 Benutzerhandbuch



4 Stromkabel








5 AV-Kabel




6 HDMI Kabel


FUNKTIONSÜBERSICHT

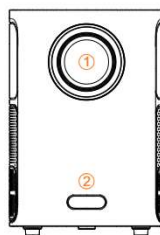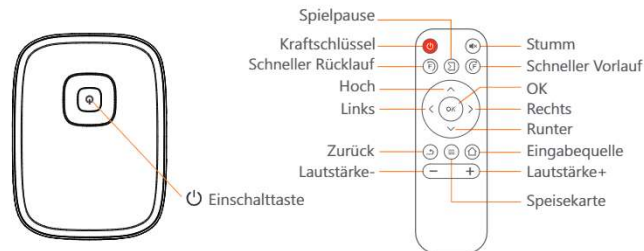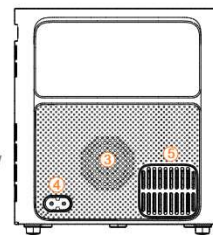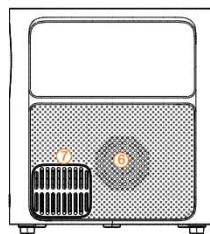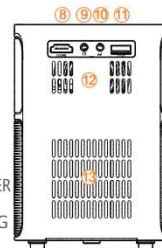
 1 KAMERA-OBJEKTIV
 2 IR-FENSTER

 3 LAUTSPRECHER
 4 STROMEINGANG
 5 BELÜFTUNG

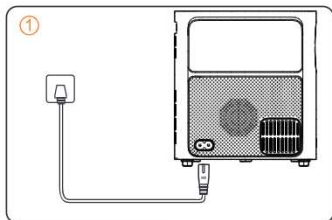 6 LAUTSPRECHER
 7 BELÜFTUNG

 8 HDMI
 9 AUDIO AUSGANG
 10 AV IN
 11 USB
 12 IR-FENSTER
 13 LUFTEINLASS

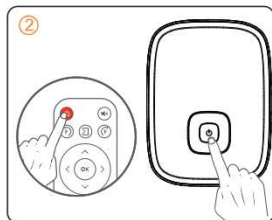SCHNELLSTART



① Stecken Sie das Netzkabel in eine Steckdose.






② Drücken Sie den Netzschalter, um den Projektor einzuschalten.

③ Das Programm auswählen und durchführen.


④ Passen Sie den Fokus an, um eine klare Bildleistung zu erzielen.

⑤ Drücken Sie den Netzschalter zweimal, um den Projektor auszuschalten.

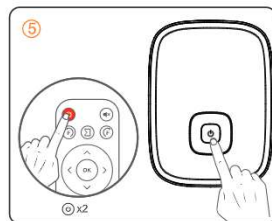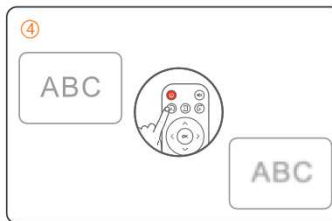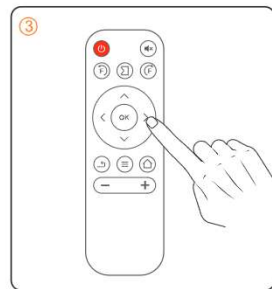


EINGABEQUELLE


A Multimedia-Verbindung

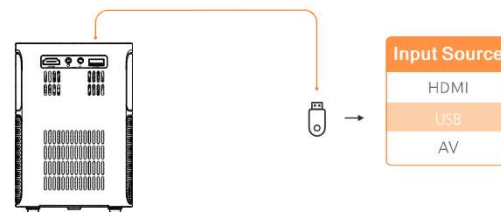

B HDMI-Verbindung

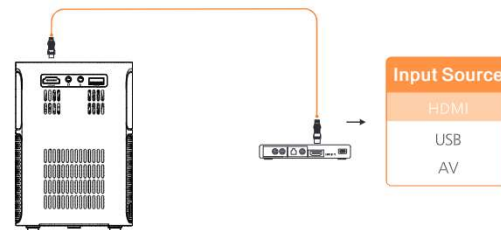

C AV-Anschluss

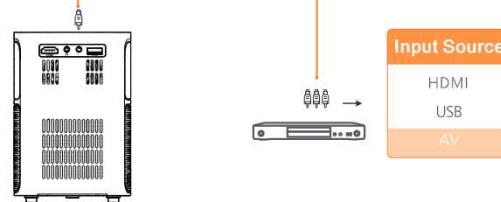

Netzwerkverbindungen

1 Wi-Fi-Verbindung

Einrichten – WLAN anklicken – Netzwerk auswählen – Code eingeben – Fertig




2 Kartenprojektion

EINSTELLUNG – Kartenprojektion – Front-Desktop




3 Mausfunktion


Falls einige Apps nicht durch das Sperren von Symbolen gesteuert werden können, können Sie die Menütaste dreimal hintereinander drücken und dann einen Mauszeiger auf dem Bildschirm haben, um diese Apps zu steuern. Im Gegenteil, Sie können die Menütaste dreimal hintereinander drücken, um zum normalen Steuermodus zurückzukehren.

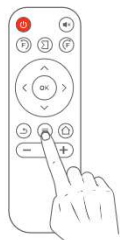


PROJEKTORANSCHLUSS

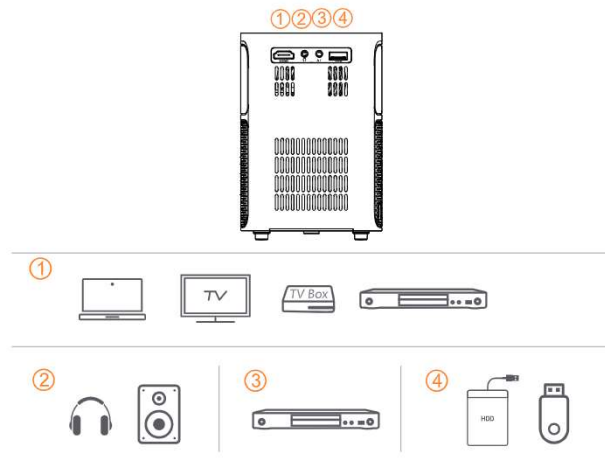

PROJEKTIONSDISTANZ UND -GRÖSSE

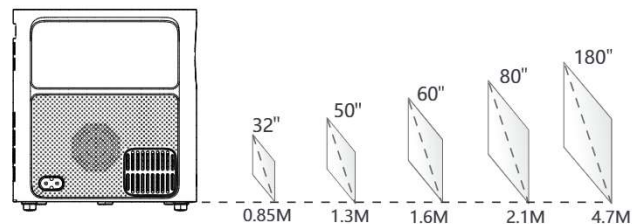

BEACHTEN



Empfohlen



Nicht empfohlen



ANLEITUNG ZUR FEHLERBEHEBUNG

1. Verschwommenes Bild

*Fokusring/Trapezkorrektur anpassen.

*Projektor und Leinwand/Wand müssen einen wirksamen Abstand haben.

2. Fernbedienung reagiert nicht

*Stellen Sie sicher, dass die entfernten Punkte direkt am IR-Empfänger liegen.

*Decken Sie den IR-Empfänger nicht ab.

*Überprüfen Sie die Batterie.

3. Auf den Kopf gestellte Bilder

Rufen Sie "Menü" am Projektor oder auf der Fernbedienung auf, um das Projektionsbild umzudrehen.

4. Werkseinstellungen zurückgesetzt

*Gehen Sie zu Menü > OPTION > Werkseinstellungen wiederherstellen, um den Projektor auf die Standardeinstellungen zurückzusetzen.